


Telephone:
Fax:
VAT Registration No.:

Name: xantiashema
Address:

Manufacturer: Citroen
Model:
Year: 1995
Registration:
Mileage:
Job number:
Date

Tel - Private:
Tel - Business:
Tel - Mobile

X88	AC connector
A23	Alarm system control module
K48	Alarm system relay
31	Battery -
30	Battery +
A31	Central locking control module
A124	Coded keypad
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
B75	Engine speed (RPM) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y99	Idle air control (IAC) valve
T1	Ignition coil
15	Ignition switch - ignition ON
50	Ignition switch - start signal
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B83	Manifold absolute pressure (MAP) sensor
C3	Suppressor
R10	Throttle body heater
B147	Throttle position (TP) sensor
S249	Transmission shift position switch
B33	Vehicle speed sensor (VSS)

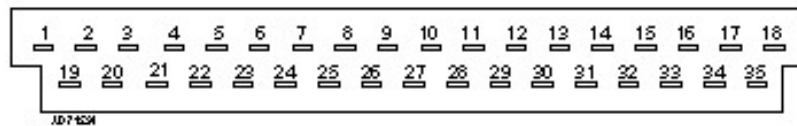

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

